

SANGEAN

FM DIGITAL TUNING UNDER
CABINET CLOCK RADIO

RADIO-REVEIL FM NUMERIQUE
DE DESSOUS D'ELEMENT

RADIO-RELOJ CON
SINTONIZACIÓN DIGITAL DE FM

DIGITALE WEKKER MET
DIGITALE FM TUNING
(VOOR BEVESTIGING
ONDER KASTPLANK)

UKW-UNTERBAURADIO
MIT WECKER



WARNING:
TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO
NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

 THE LIGHTNING FLASH AND ARROW HEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF "DANGEROUS VOLTAGE" INSIDE THE RADIO.	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE BACK, NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.	 THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THIS RADIO.
--	---	---

381R901-A 

Operating instruction	GB
Mode d'emploi	F
Instruccions de manejo	E
Gebruiksaanwijzing	NL
Bedienungsanleitung	D

UCR-100

Important safety instructions




1. Read and understand all safety and operating instructions before the radio is operated.
2. Retain instruction: The safety and operating instructions should be retained for future reference.
3. Heed warnings. All warnings on the appliance and operating instructions should be followed.
4. Follow all operations and use instructions.
5. Water and moisture: The appliance should not be used near water. Do not use near a bathtub, washbowl, laundry tub, kitchen sink, wet basement, swimming pool, etc.
6. Unplug the radio from the AC power outlet before cleaning. Use only a damp cloth for cleaning the exterior of the radio. Clean the radio only with dry cloth.
7. Do not place the radio on an unstable cart, stand, bracket or table. The radio may fall, causing serious personal injury and damage to the radio.
8. Ventilation: This radio should be situated  so that its location or position does not interfere with its proper ventilation. For example, the radio should not be used on a bed, sofa, rug or other soft surfaces that may block the ventilation openings. It should not be placed in a built-in situation like a cabinet that may reduce air flow through the ventilation openings.
9. Don't install near any heat sources such as radiators, heat registers, stoves, or other apparatus (include amplifiers) that produce heat.

- 
- 
10. Don't install defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug doesn't fit into your outlet, consult an electrician for replacement of the obsolete outlet.
 11. Power sources: The radio should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your radio dealer or power company.
 12. Power cords: The power cord should be positioned so it is not walked on, pinched, or items placed on top of it. Pay particular attention to cords at plugs, convenience receptacles, and the point where they exit from the unit. Unplug the power cord by gripping the power plug, not the cord. Operate the radio using only the current type of power source indicated. If you are not sure of the type of power supply to your home, consult your dealer or local power company.
 13. Do not overload wall outlets or extension cords. This can result in a risk of fire or electrical shock. Never insert objects of any kind into the radio through opening. The objects may touch dangerous voltage points or short out parts. This could cause a fire or electrical shock.

GB

- 
- 
14. Only use attachment/accessories specified by the manufacture.
 15. If the radio is left attended and unused for long periods of time, unplug it form the wall outlet. This will prevent damage caused by lightning or power line surges.
 16. If the radio is left unattended and unused for a long period of time, remove the batteries. The batteries may leak and damage furniture of your radio.
 17. Do not attempt to service the receiver yourself. Removing the cover may expose you to dangerous voltage, and will void the warranty. Refer all servicing to authorized service personnel.
 18. Object and Liquid Entry-Never push objects of any kind into this radio through opening as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind of product.
 19. The appliance should be serviced by qualified service personnel when:
 - A. The power supply cord or the plug has been damaged.
 - B. Objects have fallen or liquid had been spilled into the radio.
 - C. The radio has been exposed to rain or water.
 - D. The radio does not appear to operate normally or exhibits a marked change in performance.
 - E. The radio has been dropped, or the enclosure damaged.

Installing the appliance

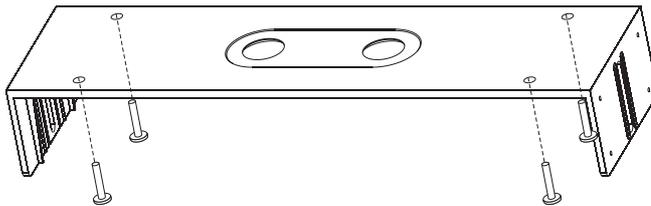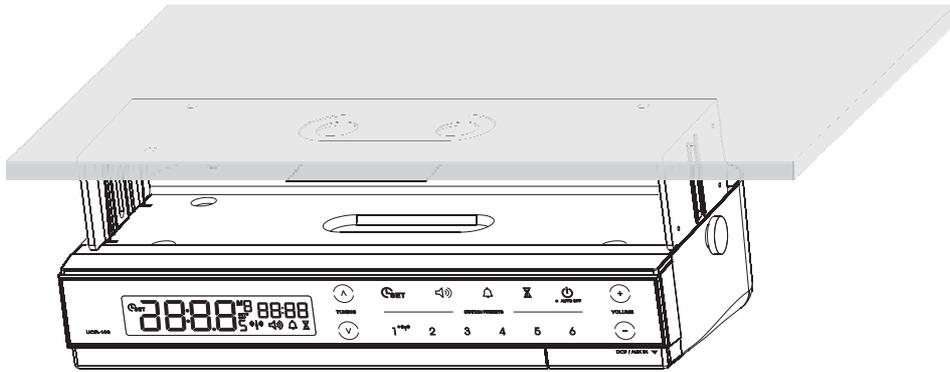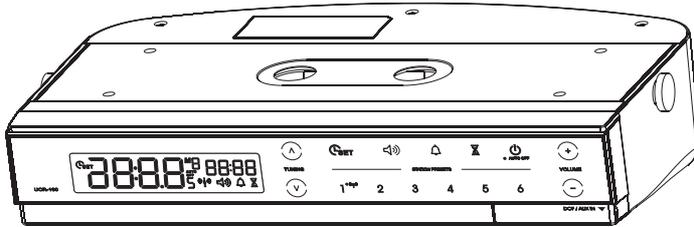


GB

Your clock radio is designed for substructure-installment under shelves, kitchen cupboards etc. The speaker must point downwards and be unobstructed to offer the best possible sound quality. Please don't install this appliance close to stove or other cooking appliance so that is not subjected to damaging steam. The clock radio is to be mounted in the desired position with the bracket (A), on the appliance. To simplify the installment, the bracket can be removed from the appliance by loosening the two knurled screws (B) and (C) from the appliance. We recommend using the following helpful trick for the installment, to enable the mounting of the bracket without having to measure:

1. Stick a piece of industrial strength adhesive tape on the left and right sides of the bracket.
2. Press the appliance against the surface where it is to be installed.
3. Without letting go of the appliance, remove the two holding screws (B) and (C) and remove the radio carefully from the bracket (A).
4. Now you can screw on the bracket with the four screws.
5. Slide the radio onto the bracket and tighten the knurled screwdriver to tighten screw (B) and (C).
6. Completely unwind the short-wave cable antenna.
Fasten the antenna onto the underside of the cupboard or shelf with a reliable adhesive tape.

Installment material (with delivery):

- 4 short screws
- 4 long screws
- 4 spacers

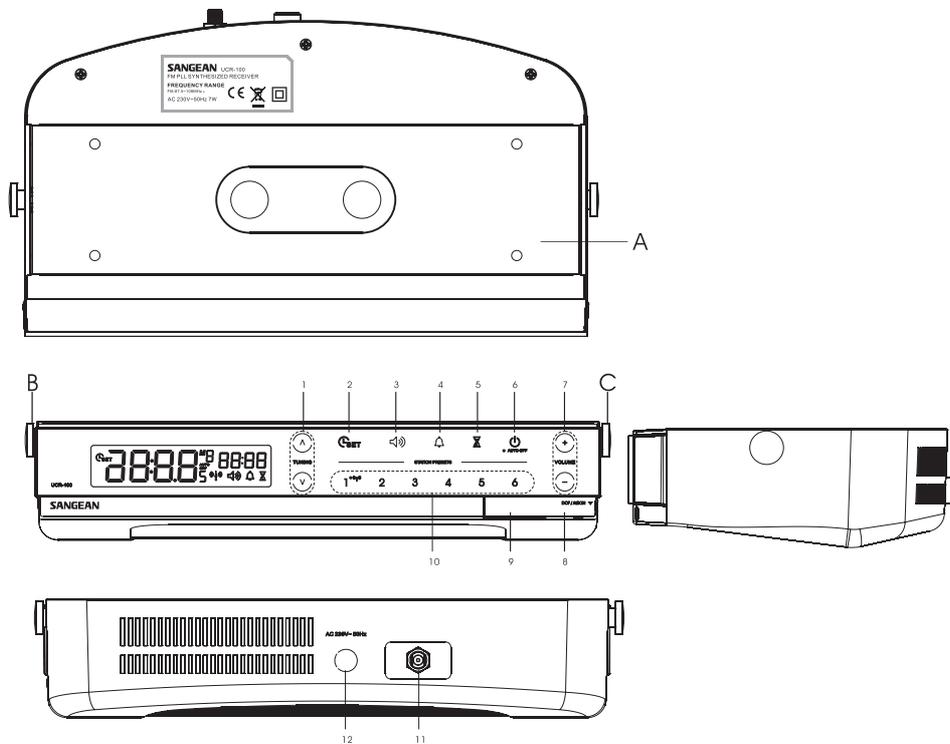


Control Keys

- ① Tuning Up and Down
- ② Clock Set
- ③ Radio Alarm
- ④ Buzzer Alarm
- ⑤ Timer
- ⑥ Power
- ⑦ Volume Up and Down
- ⑧ AUX IN
- ⑨ Time Auto Setting switch
- ⑩ Presets
- ⑪ F-type FM antenna connector
- ⑫ Power jack

GB

LCD display

- (a) Clock set
- (b) Hour and minute digits
- (c) Preset memory
- (d) Alarm time
- (e) Timer
- (f) Buzzer alarm
- (g) Radio alarm
- (h) Time Auto Setting
- (i) Auto Off

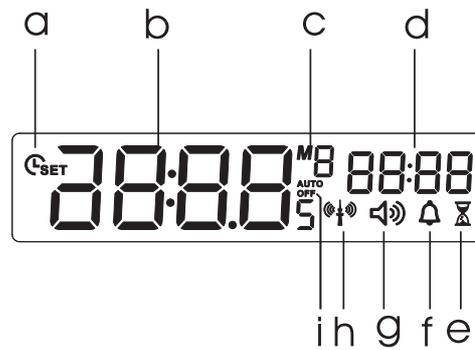

Operation

Time Manual Setting (if there is no automatic setting)

1. After the radio is plugged in the power, the display shows ' -:—'

2. Touch the key **C_{SET}** and hold for 2 seconds, and the display flashes the hour digits.

3. Touch the  and  keys to adjust the hour.

4. Touch the key **C_{SET}** and the display flashes the minute digits.

5. Touch the  and  keys to adjust the minute.

6. Touch the key **C_{SET}** again to complete the time setting.

Time Auto Setting

When the radio is off, touch and hold the key 1*** for 2 seconds. The display will flash . And the clock will be set automatically.

- When the clock is not corrected by Time Auto Setting yet, the radio will operate the Auto Time Setting function for 15 minutes in every hour.
- When the clock is corrected by Time Auto Setting already, the radio will operate the Auto Time Setting function for 6 minutes in every hour.
- When the Time Auto Setting signal is not good enough, open the DCF/AUX IN cover to switch 1 to 2, or 2 to 1. This switch controls the direction of Time Auto Setting receiving.

Alarm Operation

There are 2 ways of alarm, which are Buzzer alarm and Radio alarm. The initial Buzzer alarm time is 7:00. The initial Radio alarm time is 6:00.

GB

Alarm setting:

1. Touch the key  (or ) , to check the Buzzer alarm time (or Radio alarm time). The display will show back the present time after 7 seconds. Or you can touch the same key to go back to the present time.
2. While the display is showing the alarm time (after the key  or  is touched), touch the key  for 2 seconds to enter the alarm time adjustment.
3. Now the hour digits are flashing. Touch the key  and  to adjust the hour.
4. Touch the key  then the minute digits are flashing.
Touch the key  and  to adjust the minute.
5. If you are setting the Buzzer alarm, press the key  to complete the setting. If you are setting the Radio alarm, touch the set key, adjust the alarm radio frequency by touching the TUNING UP/DOWN keys, then press the key  to complete the setting.

* When the radio station signal is too weak when the Radio alarm is activated, the alarm will become Buzzer alarm.

Activate/deactivate:

1. Touch the key  or  for 2 seconds to activate the Buzzer alarm (or Radio) alarm. And the display shows “  ” or “  ” with the alarm time. (When Buzzer alarm and Radio alarm are both activated, it shows the incoming alarm time)
2. Touch the key  or  for 2 seconds again to deactivate the Buzzer alarm (or Radio alarm). And “  ” (or “  ”) will disappear.

When the alarm is sounding:

Touch the key  to stop the alarm.

Radio Operation

Frequency Tuning

1. Touch the key  to turn on the radio.

2. Touch the key  TUNING or  TUNING to adjust the frequency.

3. Touch the key  TUNING or  TUNING for 0.5 second and the radio will go to **GB** the next station.

Station Preset

1. Tune into the station that you would like to store.
2. Touch the PRESET STATION key (number 1, 2, 3,4, 5 or 6) for 2 seconds to store the station into the desired preset (1-6).
3. To recall the preset station, touch the STATION PRESET key 1-6 for less than 2 seconds.

AUTO OFF timer – auto shut off

1. Continuously touching the POWER key  will activate the sleep function , the radio will switch off automatically in 60, 45, 30, 15, 120, 90, 60 minutes.
2. Release the POWER key when the desired AUTO OFF minutes is shown on the display.
3. The radio will turn itself off automatically when the time selected is elapsed.
4. If you wish to turn off the radio beforehand, press POWER button. And the AUTO OFF timer symbol will disappear. And the AUTO OFF function is deactivated.

Timer

1. Touch the key , and touch the TUNING UP or DOWN key
( or ) to adjust the time.
2. Touch the key  again to complete the setting. It will beep for 3 minutes when the set time is elapsed.
3. When the timer is beeping, touch the key  or  to stop it.
4. To deactivate the Timer before the time is elapsed, touch the key  again.
5. The Timer function works both when the radio is on and off.
When the time is elapsed while the radio is on,
6. When the Timer is been setting, touch the key 1-6 for more than 2 seconds to store the time. Touch the key 1-6 for less than 2 seconds to recall the saved time set.

AUX IN socket

Open the DCF/AUX IN cover and plug in external audio devices such as CD player to the AUX IN socket, then play your device, the radio will amplify and play out the signal form your device.

GB

Technical data

Power: 230 Volt/50 Hz, 7 Watts

Frequency coverage: FM 87.5 – 108.0 MHz



If at any time in the future you should need to dispose of this product please note that: Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)